
Thinking of you Blectrolux®

instruction manual

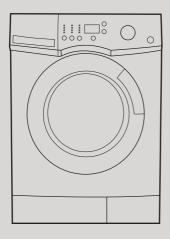

MODEL:
AURA CARE
SALSA CARE

Please read and keep this manual for correct maintenance and

Operation of this washing machine.


Electrolux regd. Trade mark of AB electrolux (PUBL) and is used under licenced

Electrolux®

Contents

	Pa	ages
•	Wash care symbols	1
•	Safety notes	2
•	Notes on disposal	2
•	Useful advice for the user	3
•	Description of Parts	4
•	Description of Control Panel	5
•	Quick start	6
•	Programme selector	6
•	The main wash	7
•	Program table	8
•	Special washing feature	9
•	Cleaning and routine maintenance	10
•	Malfunctions and solutions	11
•	Malfunction display and remedies	12
•	Technical specifications	12
•	Installation Instruction	13-16
•	Washing Tips	17
•	Warranty Terms & Conditions	18-19

Wash Care Symbols

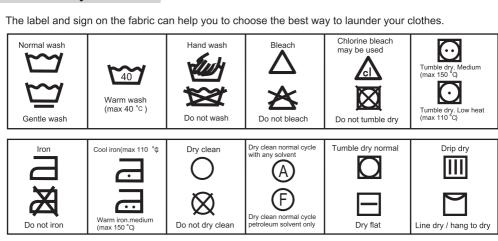

Thinking of you

Electrolux®

Safety notes



To prevent any damage to your and others' life or property you have to follow the safety notes

Electric shock hazard

- Please do not replace the power cable with authorization.
- Do not draw the power cable forcefully to pull out the mains plug.
- Please do not plug/draw the mains plug with wet hands.
- Do not damage the power cord and the power plug.
- To prevent any accide ntal electric shock, please make sure the mains plug of the washing machine is earthed well.

Injury danger

- Please do not dismantle and install the washing machine under no instruction or supervision.
- Please do not climb or sit on the coping of the washing machine.
- Please do not lean on the opened door of the washing machine.
- Please do not forcefully open the door when the washing machine is at work.
- Please do not put some pyrotoxin like the candle mosquito coil electric cooker and etc. On the washing machine.
- Children are not allowed to play in the basket of the washing machine, and please pay attention to prevent children's hand from being locked in the washing machine's door slot.

Damage danger

- Please do not wash over the regulated washing capacity.
- Please do not expose the washing machine directly under the sun.
- Please do not install the washing machine in the humid and drenching environment.
- At the cleaning and maintenance, please pull out the power cable and do not directly wash the washing machine with water.

Poisoning danger

Please put the detergent and softener out of children's reach.

Explosion danger

 Please do not wash the clothes with some flammable substances like the coal oil gas alcohol and etc or there will be the explosion.

Notes on disposal

When you want to dump the washing machine because it is not operable or not worth of repairing, please pull out the mains plug and cut the power cable. Please ensure that the door lock is rendered inoperable to prevent children from being trapped inside while playing. All the material used for this machine is environmental-friendly and recyclable. Please help the disposal of the material via environmental-friendly means.

Useful advice for the user

Usage

- Connected with the cold tap water only.
- Your machine solely designed for the domestic used.
- This washing machine is suitable for washing-the fabric that can be washed in the water solvent with the detergent.
- Please select the detergent and clothing care solvent that is suitable for the cylinder washing machine.

First wash

- Before the first wash, you need to finish the high temperature self-clean cycle without any laundry. Please follow the steps below:
- 1 Plug the power . 2 turn on the tap. 3 slect the self-clean programme.
- **4** Put detergent in the compartments as indicated in the programme guide in this instruction manual and push start/pause button.



• Please wash the white fabric with the colored fabric separately; otherwise, the white fabric will turn gray.

The choice of the detergent

- The recommended main wash detergent and pre-wash detergent for this cylinder washing machine is low bubble detergent suitable for the cylinder washing machine. It is forbidden to use high bubble detergent unsuitable for the cylinder washing machine, in case of any damage to the washing machine.
- The dosage of the detergent lies on: 1. amount of laundry
 2.the degree of soiling 3. ater hardness 4. The washing ability of the detergent
- Please check the instruction of the detergent before the wash.
 You will get a better result by using the detergent properly.

 Main v



- Main wash detergent Special additive Pre-wash detergent
- Pre-wash detergent-if there is any clothing that needs the pre-wash, please add the pre-wash detergent in the pre-wash compartment for the better effects during the following wash procedure. (At this time in the main wash detergent compartment, the liquid detergent shall not be used, or the deserved effects cannot be reached.)
- Special additivethe rinse additive is the softeners mainly. Please dilute the softener with water before
 use if it is dense.
- Bleacher if the bleacher is needed, it shall be used according to the bleacher's instructions in the
 washing procedure.


The cleaning of the detergent dispenser drawer





- The detergent will deposit in the compartment after a long time usage, so the detergent drawer needs to be cleaned frequently.
- Press the detergent box limit parts, and pull out the drawer of the detergent box and to clean the detergent compartment.


Description of Parts

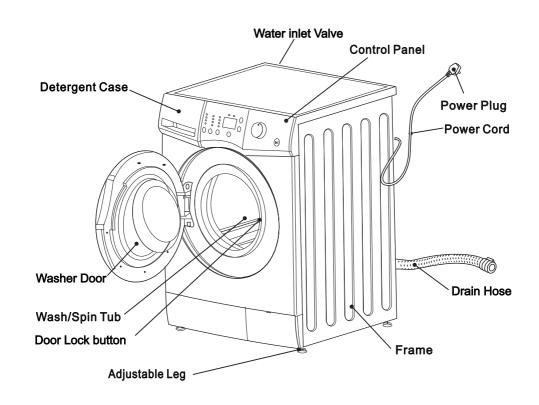

Washing Machine Accessories

Instruction manual	Water Supply Hose	Tap Adaptor	Drain Hose	Ratmesh Screw	4 Hole Covers	Spanner
			Hose Band			5/


Description of Control Panel

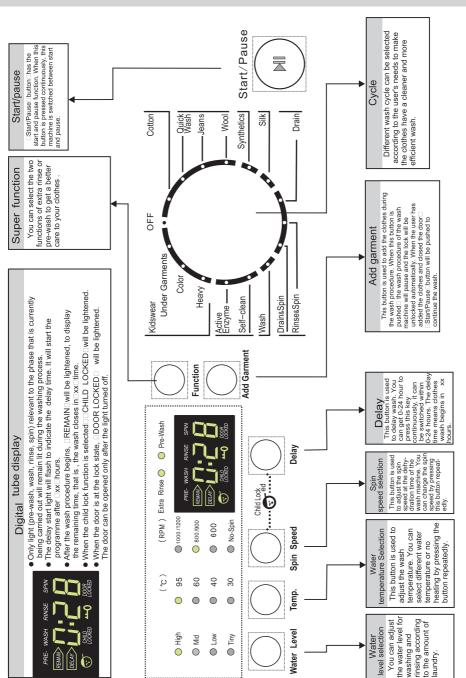

NOTE: This layout is just for representation only. Pls do not compare with you machine.

Thinking of you Electrolux®

Quick start

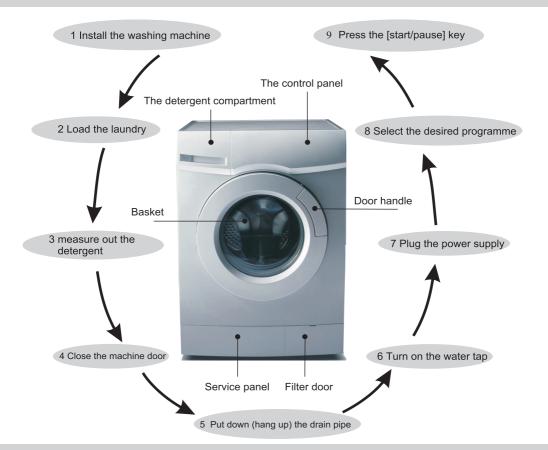

Program selection

- 1 Rotate the programme select dial to select the desired programme.
- 2 Select the proper water level, temperature, spin speed or other attached functions.
- 3 To press the start/pause

The wash stops

- When the wash stops, music will prompt from the wash machine.
- Turn off the water tap.
- Rotate the programme selector to the OFF (stop)position, and pull out the power cable.

Thinking of you

Electrolux®

The main wash

Instruction to the delay wash procedure

- When the delay procedure starts, the Nixie tube only displays the delay time. The indicator light
 will be lightened. When the delay time reaches, the indicator light will be off. The indicator light
 of the remaining time is on to display the remaining wash time.
- The delay start time displayed by this machine, indicates that the clothes washing will be started in xx hours.

Steps in details

- 1 To turn the programme selector dial and select a desired programme;
- 2 Users can select the proper water level, temperature, spin speed or other attached functions according to their needs;
- 3 To press the Delay key:

- 4 To select the delay time;
- **5** After the start/pause key is pushed, the wash machine is at the standby condition. The wash will be automatically performed when the delay time is over.

Instruction to single wash procedure

- The user can freely choose from single wash, single dehydration bleaching wash + dehydration or single dehydration according to their need.
- To choose Bleaching wash + dehydration procedure, to set the rotary speed to the dehydration-free, and the single bleaching wash function can be realized.

Instruction of the child safety feature

- This machine incorporates a special child safety lock, which can prevent children from carelessly pressing keys or making the faulty operation.
- When the washing machine is at the operation state, press the pre-wash and bespeak keys all at the same time for over 3 seconds to start child lock function. When child lock function is set, no key can have any effect to the washing machine.
- Under the start state of the child lock button, the pre-wash and bespeak keysshall be pressed at the same time for over 3 seconds to release the child lock function.
- Under the start state of the child lock, even if the machine is closed, after the machine is opened, the procedures before the machine is closed will be operated. If at the operation, the process needs to be changed, or the next operation will be performed when the washing is finished, the child lock function shall be disabled before it.

Manual soaking

- 1 Load the laundry into the washing machine;
- 2 Put the detergent into the detergent compartment according to the instructions from the detergent manufacturer.
- **3** Rotate the programme selector dial to the desired programme, and then press the □start/pause□ key to restart the washing machine .
- 4 In about 10 minutes, press start/pause key again, the washing machine will suspend the work, to have the clothes soaked in the water. After you have selected the needed soaking time, press the start/pause key, the machine will continue the previous wash.

Program Table























































Clothes to be	washed (suggest	Ordinary clothes	Not so dirty clothes	Comparatively thick clothes	Wool fleece clothes	Chemical fiber cloth	Silk clothes	Children's underwear	Ordinary children's w	Comparatively dirty children's wear	Comparatively dirty clothes	No any deter gent	The clothes that only need the single wash	The clothes that only need the bleaching w	The clothes after the hand wash	The clothes that don't need the dehydration
Default Operation Time (Hr)	SALSA CARE	1:37	0:28	2:47	0:58	1:11	0:42	1:52	1:07	1:38	2:16	1:12	0:32	0:21	0:12	0:01
Default Oper Time (Hr) ∠		1:23	0:23	2:06	0:43	0:57	0:34	1:34	0:53	1:20	1:52	1:03	0:32	0:14	80:0	0:01
	Softener CARE	0	0	0	0	0	0	0	0	0	0	0	×	0	×	×
detergent box	Pre-wash Main wash	•	•	•	•	•	•	•	•	•	•	•	•	×	×	×
ρ	Pre-wash	0	×	0	×	0	×	0	0	0	•	×	0	×	×	×
Dro Woch		Optional	Non-optional	Optional	Non-optional	Optional	Non-optional	Optional	Optional	Selected	Must	Non-optional	Optional	Non-optional	Non-optional	Non-optional
Dingo	EAUG MIISE	Optional	Optional	Optional	Optional	Optional	Optional	Optional	Optional	Optional	Optional	Non-optional	Non-optional	Optional	Non-optional	Non-optional
Max. Wash Capacity (kg)	SALSA CARE	7	3.5	7	2.5	3.5	2	7	3.5	3.5	3.5	\	7	\	/	/
	AURA CARE	9	3	6	2.5	3	2	9	3	3	3	\	9	\	/	/
Maximum spin speed RPM	1000	1000	1000	1000	008	008	009	1000	1000	1000	1000	009	\	1000	1000	\
Maximum	(Centigrade)	92	40	92	40	09	30	92	40	09	60 (Default)	95 (Default)	92		\	\
Fabric	Cycle	Cotton	Quick wash	Jeans	Wool	Synthetics	Silk	SIT Under Garments	d swe	Heavy Ki	Active enzyme	Self-clean	Wash	Rinse + Spin	Drain and Spin	Drain
—— 8 ——																

It means it is necessary to add the detergent or the wash effect cannot be reached.

The operation time of the wash machine will change with the variance of the water temperature, water level, clothes, inlet water pressure and drain state. O It means to add the detergent or the softener when it is needed. x It means the detergent or the softener cannot be added.



Special Washing Features

High temperature self clean

The self-clean cycle is specially set in this machine to clean the drum and tube. It applys 95°C high temperature sterilization to make the clothes washing more green. When this procedure is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this procedure regularly according to the need.

Active enzyme

Active enzyme procedure, gives full play to the active enzyme of the detergent powder, 40 °C pre-wash, 60 °C main wash (the wash machine only displays the main wash temperature), and it is suitable for the clothes hard to wash.

Extra Rinse

The extra rinse is mainly used for the underwear and some clothes with the detergent residue limitation. The laundry will undergo an extra rinse if you select this option. It can rinse the laundry thoroughly.

Power off memory

You do not need to do any change if the washing machine gets power off at the running state. The washing machine will continue the wash when it get power again. Please do not open the door by force during the power off. Please get help from the professional if you want to open the door.

Add garment

This operation can be executed during the washing procedure.

When the basket of the washing machine is still rolling and there is large amount of water with high temperature in the basket, The state is unsafe; the door cannot be opened forcefully.

To press add garment , and start the clothes adding in the midway function, please follow the steps below:

- 1 Wait until the basket stops rotation.
- 2 The door lock is unlocked.
- 3 Close the door when the clothes needed are loaded, and repressed the start/pause button.



The washing machine does not respond to the add garment function under the high water level state of the bleaching wash or the high temperature state of the wash.

Thinking of you Electrolux®

Cleaning and Maintenance of the washing machine



Note: make sure to pull out the power plug before the cleaning and maintenance.

Routine maintenance

Every time when the washing is finished, it is necessary to open the machine door, and mop up the remaining water of the rubber seal ring, and to clean the dirt inside the seal fold in time, in order to prevent any milden and rot. To open the machine door slightly, to discharge the humidity inside the barrel.

Cleaning of the machine

 The machine cannot be cleaned by some hard substances like the solvent or steel wool and etc., and it can be cleaned by the soft cloth.

Emergency drainage and the cleaning of the filter of the drainage pump

- If the machine cannot work normally or the filter net of the drainage pump cannot be cleaned, please follow the methods below:
 - Rotate the programme selector dial to OFF(stop) position and to close the water tap.
- If necessary, wait until the water has cooled down. 2
- 3 Place a contai remove its ca

the floor, pull out the emergency emptying hose, place it into the container. wait until the remaining water naturally flows out.



Open the filter's door



To turn the emergency drain hose ca



Pull out the emergency emptying hose



Remove the cap

- Please to clean the drainage pump regularly, to prevent the sundries to block the drainage pipe.
- 1 Close the water tap
- 2 Disconnect the power plug
- 3 Empty the water with the above

- emergency drainage way
- 4 Screw the pump cover out
- 5 Clean the filter 6 To install the pump cover







Cleaning of the inlet water valve

If the inlet water time is found to be too long, please clean the filter net of the inlet valve.





- To screw the inlet water pipe out.
- Clean with the tool (like the gauze brush and etc.)

Malfunction and Solution

 Close the washing machine's door. Confirm and press the The washing machine does not work start key. Correctly connect the inlet water pipe. Water leakage Reload and distribute the laundry evenly in the drum. The spin of the clothes is abnormal There is the peculiar smell in the Run a Self-clean cycle without any clothes. washing machine No water is visible in the drum No fault-water is under the visible area. There is the remaining water in the No fault- the effect of the softener will not be affected. softener's box The remaining detergent is left on The water-fast component of the non-phosphorus detergent will be left on the clothes to form the line scale. Plesae select □rinse and spin □programme or the clothes brush away the fleck with the brush when the clothes is dried. Open the water tap. Check the selection of the procedure. Check the water The washing machine does not fill Pressure to seeif the water pressure is insufficient. Put through the feed-water. Close the washing machine's door. To check it the inlet water pipe is bent or blocked. Make sure the end of the drainage pipe to be higher than the water level of the The washing machine fills and inside the machine. empties at the same time. Check if the drainage pipe and sewage have been sealed, if they have been, there will be the poor ventilation to cause the siphonage effect. Check if the drainage pumps is blocked. No drainage of the washing machine Check if the drainage pipe is bent or blocked. Check the height of the drainage nozzle, make sure it is 0.6-1 meter from the bottom of the washing machine. Level the washing machine. Fasten the footing. Vibration of the washing machine To check if the internal packing for the transportation have all been removed. Check if the detergent is excessive, if it is the specialized detergent for the cylinder washing machine. The bubble spills from the Dip one scoop of the softener mixed with 1/2 liter of water to the detergent box II. detergent box Reduce the usage amount of the detergent in the next time's wash. The machine stops when the Power failure or water cut. procedure has not been finished The drainage pump has noise The inner barrel water of the washing machine has been drained still a small amount of water in the drainage pump and pipe. The drainage pump during the operation when the continuously operates and takes in the air, and at this time there is the noise, water has just been drained which is normal situation. The washing machine adds water automatically. To stop for some time during the wash procedure Because there is too much bubble in the tube, the washing machine is cleaning the hubble


If you cannot solve the above abnormal situations, would you please, 1. To turn the procedure knob to OFF, pull out the attachment plug; 2. to close the water tap, and contact the nearest service centre.

Malfunction display and solutions

If the washing machine cannot operate normally, a alarm code appears on the display. Please carry out the following checks.

Display	Reason	Solutions					
EID	Inlet water overtime	Open the water tap, to check if the inlet hose is squashed or kinked, check the filter in the inlet valve is blocked or not; check if the water pressure is too low					
E21	Overtime of the drainage	Check if the drain pump is blocked (see page 10).					
E30	The door has not been closed	Check if the door of the washing machine is closed check if the clothes is pinned by the door.					
E50	Voltage is too high	Check if the voltage is too high if it is a need to add the constant voltage device.					
EXX	Others	Try again. Please contact your local service center if the problem persists.					

Technical specifications

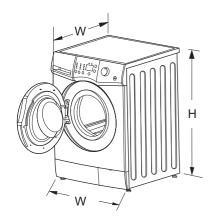

Item	AURA CARE	SALSA CARE
Wash Capacity (kg)	6.0	7.0
Power Source	230V, 50Hz AC	230V, 50Hz AC
Power (Heat)	2150W	2200W
Product Size (WxDxH) mm	595x523x850	595x565x850
Net Weight (kg)	65.0	75.0
Water Qty (Wash)	67 Lit/ Cycle	82 Lit/ Cycle
Water Pressure	0.02~1.0MPa	0.02~1.0MPa

Installation Instruction


Guidelines

In delivering the machine

- The delivery bolt shall be installed on the machine by the professionals, and please do not dismantle or install privately.
- Please drain empty the water inside the machine.
- Move cautiously. Do not grasp any salient parts of machine. The machine door cannot be used as the handle for delivery.

Installation Position


- Please install the washing machine on solid and flat ground.
- Please do not place the washing machine on the slope, soft carpet or wooden floor.
- Please do not install the washing machine outdoors, to prevent the washing machine from being frozen to damages in machine parts.

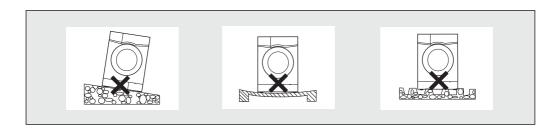


Installation Instruction

Removal of Delivery Bolt

Before usage, the delivery bolt shall be dismantled and well kept for further use. Please use spanner for operation. Be careful in operation, to prevent any damage by slipping of spanner.

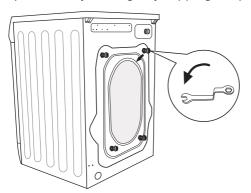

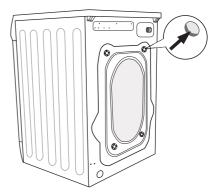


- To dismantle the 4 fixed bolts
- Insert the hole cover of the attached parts into the hole to close it

Level Adjusting



If the floor is obviously uneven, it needs to be adjusted, or the washing bucket will incline. It vibrates the machine, punches or causes machine to move from its position.

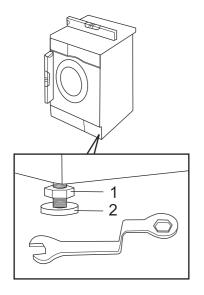

By adjusting height of the machine legs, and by gradienter, adjust the levelness of the machine.

> First, unscrew the adjusting nut 1 with the spanner.

> Next adjust the height of the legs by the leg 2.

Last screw the nut 1 to lock the leg.

(I) Electrolux

Installation Instruction

 
How to Attach the Tap Adaptor

- 1.Loosen the four screws and slide the top of the Tap Adaptor (Section A in the figure) onto the faucet. Then, securely tighten the four screws provided with the Tap Adaptor by using a screwdriver to secure the top of the joint to the faucet.
- 2. Remove the CAUTION label from the Tap Adaptor.
- 3. Turn the male coupler on the joint (section B in the figure) clockwise to attach it securely to the top of the joint (section A in the figure).
- The appliance is to be connected to the water mains using new Water Supply Hose and Tap Adaptor Joint and old hose-sets should not be reused.



CAUTION:

If outer diameter of faucet is larger than calibre of the Joint Ring, loosen the four screws and remove the Joint Ring from the Tap Adaptor.



Installing Water Supply Hose to the Washer

- 1. Turn the nut clockwise while holding the hose.
- Turn the nut counterclockwise after turning the faucet off when you want to detach the Water Supply Hose.



Lock Level

Sleeve


Connecting the Water Supply Hose to the Tap Adaptor

- 1.While pushing the sleeve on the female coupler (section D in the figure) of the joint down with your fingers, connect the female coupler to the male coupler (section C in the figure).
- 2.Release the sleeve, then push the Water Supply Hose up into the Tap Adaptor until it clicks into place.
- Pull the Water Supply Hose down to make sure that it is securely attached.

How to Detach the Water Supply Hose

Please read the following procedure in order to avoid spilling water when detaching the Water Supply Hose.

- 1. Turn the faucet off.
- 2.Press the POWER ON/OFF button to turn the power on ,the NORMAL button and the START/PAUSE button.
- 3.Press the POWER ON/OFF button to turn the power off 15 seconds later.
- 4. While pushing the lock lever and the sleeve on the female (section D in the figure)of the joint down with your fingers, detach the female coupler from the male coupler (section C in the figure).

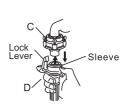

Installation Instruction

Inlet Hose connection to Machine


Connect the hose to the water inlet at the back of the washing machine.




Power Supply Connection

- Make sure that the voltage of the power supply is the same as the electric specification of the washing machine.
- Please use AC spot above 16A separately, and properly choose the fuse properly.
- Please replace it by the professional if the power supply wire is damaged, and only the power wire from the manufacturer or the customer service center can be used.
- Please do not connect it with the power connection board, the universal plug or socket.
- Please do not connect the power supply with wet hands.
- Please do not pull out the plug by pulling the power wire with force.

Drain Hose Installation

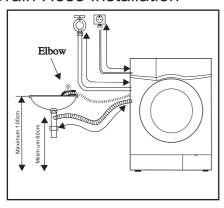

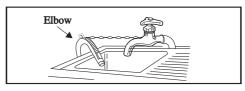

- Please use elbow to bend the drain hose in a proper bending angle. Fix it well when using the elbow.
- Please fix the drain hose well in installation.
- The correct position of the drain hose can prevent the floor from water leakage.
- To prevent the siphon situation, the installation height of the drain hose should be between 0.6-1m, and the end of the drain hose cannot be immersed in the water.

Electrolux®

Washing Tips

- Check whether there is anything in the pockets (for example: coin, pin, clip, paper, etc).
- Zips shall be zipped close and buttons or hooks shall be fixed. The loose band or ribbon shall be bound together.
- Do not wash colored clothes together.
- Follow the washing guide printed on the clothes' mark or the symbol types of care label by the manufacturer.
- Before first washing, use a white towel dipped in detergents to rub an uneasily discovered place of the clothes for a moment, check whether there is color on the white towel, if the color fade, be careful in washing the clothes.
- If a part of clothes is too dirty, use a towel or soft brush dipped in detergents to rub the dirty part slightly in a same direction. then put the clothes into machine.
- The machine may shock heavily in spin when there is only few clothes or single big and heavy dress, add 2~3 pieces of clothes into the tub to relieve shock.









WARRANTY TERMS AND CONDITIONS

Valued Customer Privileges

Dear Customer,

We would like you to know your privileges with respect to your ELECTROLUX washing machine.

This warranty entitles you:

- 1. Repair or replacement, free of charges, of any part or parts of your ELECTROLUX washing machine except Top Lids, Knobs, Inlet/Drain Hose and Lint Filter for a period of 24 months from the date of invoice/bill when we identify the defects as due to faulty material or workmanship and not due to improper usage or faulty electric supply/connection.
- 2.The defective parts/material shall be replaced with a functionally working equivalent part/material. The removed part(s) will be our property.
- 3.Free after sales service during the above mentioned period is available within the Municipal limits of the city or town where the Service Station/Authorised Dealer is located,
- 4.Free transportation of your ELECTROLUX washing machine to the workshop, in case of necessary repairs, is available for 2 years from the date of invoice/bill, if the washing machine is used within the municipal limits off the city or town where the Service Station/Authorised Dealer is located.

Kindly note:

- 1.Repairs or replacements of parts under your entitlement would be carried out by our nearest Service Station/Authorised Dealer. In case your ELECTROLUX washing machine requires repairs at the workshop, our representatives will advise you accordingly.
- 2. Your privileges mentioned above, are for the repair and replacement of the defective parts only and does not cover any consequential or resulting liability, damage or loss or replacement of the washing machine itself or refund of the price.
- 3. The warranty does not apply if:
- (a) Damage caused to the machine due to floods, fire, accident, riot, breakage, pest, misuse, improper or negligent use, tampering, transit and leakage from pipes etc.
- (b) Damage caused to the equipment due to failure to observe the operating instructions & precautions as in Instruction Manual.
- (c) Defects due to usage of non-recommended electrical installations/fittingsz outside the machine, electrical supply, spares, accessories, detergent & water.
- (d) Defects/failures resulting from servicing/repairs done by a person other than authorized representative of company.
- (e) The serial number of machine is altered, obliterated or missing,
- (f) The washing machine is taken out of India.
- (g) Damage result ing to the washing machine due to operation in abnormal corrosive, alkaline/acidic environment, use of harmful chemicals.
- 4. We request you to inform your nearest Service Station/Authorised Dealer in advance of any change in location of the unit or ownership to enable us to transfer your warranty after inspection to the new location/owner, in which event a nominal inspection fee as fixed by the company would be payable. Any damage caused while shifting will be repaired on a chargeable basis.
- 5. This warranty will continue to be in force for the terms herein specified irrespective of what repairs/replacements may be provided under it and after such repairs/replacements of any such parts, this warranty shall continue to remain in force only for the unexpired period of the warranty. The warranty will automatically terminate on the expiry of the warranty period of two years even if washing machine may not be in use for any time during the warranty period for any reason whatsoever including technical breakdown.
- 6. VIL employees, dealer & service channel have no authority to vary the terms of this warranty.
- 7. This warranty is not applicable if the machine is put into any commercial use or used at places like hospitals, institutions, community halls, hostels and other similar applications.
- 8. Free service outside the municipal limits specified herein will be provided after charging the actual to and fro travelling / transportation and incidentals if any.
- 9. Any dispute relating to this warranty shall be settled by triable exclusively by courts at Gurgaon.



WARRANTY TERMS AND CONDITIONS

10. If any colored internal or external components are replaced there will be commitment to ensure that shades match with the original or other components. The replaced shades, patterns, tints may vary from the customer's unit due to continuous usage of unit. Any matching components changed at customer's request will be on chargeable basis except the component which are actually needed.

For any doubts or clarifications please contact us on-



PE ELECTRONICS LIMITED

C/O, M/S TEKCARE INDIA PRIVATE LIMITED., 15km. STONE, AURANGABAD-PAITHAN ROAD, VILLAGE CHITEGAON, TALUKA PAITHAN, AURANGABAD - 431 105, MAHARASHTRA, INDIA.

PHONE No. - 02431 - 329271,329783

E MAIL: customercare@vgmail.in Web: www.servicedelight.com

AUTHORISED SERVICE CENTERS

Branch Network

NORTH ZONE

DELHI: 011-39996369 **GURGAON:** 0124-4201250/54 **CHANDIGARH:** 0172-5074588 **JAIPUR:** 0141-4085010 **KARNAL:** 9254304822 **LUDHIANA:** 0161 5032738/39/740/741

AGRA: 0562-3201515 LUCKNOW: 0522-4017315 DEHRADUN: 0135-3248805

JODHPUR: 0141-3268934, 3248934 JALANDHAR: 0181-5020297 VARANASI: 0542-2363383

IAMMU: 0191-2431759 GHAZIABAD: 0120-4162000

SOUTH ZONE

CHENNAI: 044-26209378/2629379 **BANGALORE:** 080-32941177/66/44 **COCHIN:** 0484-3113155/66/77 **HYDERABAD:** 040-32449623, 32446200

COIMBATORE: 0422-2333146 MADURAI: 0452-3268866/27 VIJAYAWADA: 0866-3248833/55

VIZAG: 0891-2732037 HUBLI: 0836-3246644/55, 4250971

MANGALORE: 0824-2491388 CALICUT: 0495 - 3233511/22 WARANGAL: 0870- 3293300/11

EAST ZONE

KOLKATA: 033-44031400 BHUBANESHWAR: 0674-2597281 RANCHI: 0651-2340362

ASANSOL: 0341-2221017 GUWAHATI: 9954746944 PATNA: 0612-6457897

WEST ZONE

AHMEDABAD: 079-26400418/26408976 AURANGABAD: 0240-2471201

BHOPAL: 0755-3206631 BARODA: 0265-2359084/3249443 SURAT: 0261-2461569

RAIKOT: 0281-2465041 GOA: 0832-2462554 RAIPUR: 0771-2445196 THANE: 022-32162709

PUNE: 020-24260329/489 INDORE: 0731-2544537 MUMBAI: 022-40584600

NAGPUR-AKOLA: 0712-2543079 | ABALPUR: 0761-3221556 NASHIK: 0253-2582703/704

Warranty Registration (Customer's Copy) Customer's Name: ____ Address: _____ Dealer's Name: Address: ----Machine Model: Machine Serial No: -Date of Purchase: ----(Dealer's signature & rubber stamp) Cut Here --**Warranty Registration** (Local Sales office Copy) Customer's Name: Address: ____ Dealer's Name: -Address: -Machine Model: Machine Serial No: ---Date of Purchase: -

(Dealer's signature & rubber stamp)



PE Electronics Limited


Registered Office: Auto Car compound, Adalat Road, Aurangabad, Maharashtra - 431005.









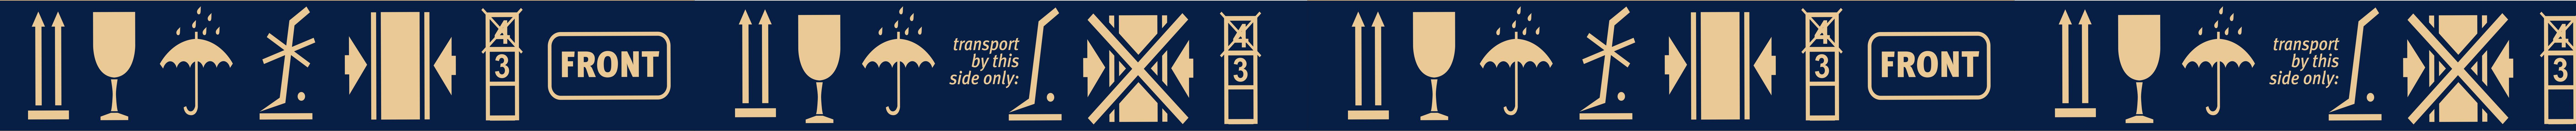

Electrolux[®]

FRONT LOAD
WASHING MACHINE



Thinking of your of the lectrolux[®]

SERVICE

© 1800 419 40 40

Landline/Mobile-Toll Free

© 39 40 40 40

Customer First

In case of consumer complaints, if any, please contact:

PE ELECTRONICS LTD.

C/O, M/s Tekcare India Private Limited,
15 km. stone, Aurangabad-Paithan road,
Chitegaon Village, Taluka -Paithan,
Aurangabad - 431 105,
Phone No. (02431) 329271, 329783
E-mail: customercare@vgmail.in
website: www.servicedelight.com
Get registered by sending SMS - 'SVC' to 53030


TECHNICAL SPECIFICATIONS

Product	Front	Loading	g Washing Ma	achine			
	Item	W/Mc	Inlet Hose	Manual	Ratmesh		
Net Quantity (Nos)	Qty	01	01	01	01		
Voltage / Watts	AC 230V, 50Hz / Wash : 2150W						
Capacity (kg)	6.0 Kg						
Packing Dimension (W x D x H) mm	680 x 590 x 875						
Product Dimension (W x D x H) mm	595 x 523 x 850						
Weight (kg)	Net : 65.0 / Gross : 70.0						
MRP Rs. (Inclusive of all taxes)	Rs. 21990/-						
Month & Year of Mfg.	Refer barcode sticker for detail						
Imported VIDEOCON INDUSTRIES LIMITED 14th km stone, Aurangabad - Paithan road, Village Chitegaon, Dist. Aurangabad - 431 105 Maharashtra, India	Marketed By PE ELECTRONICS LTD. Registered office: Auto car Compound, Adalat Road, Dist. Aurangabad, Maharashtra - 431005						

Visit us at: www.electrolux.co.in

TELOCATION B

FRONT LOAD
WASHING MACHINE

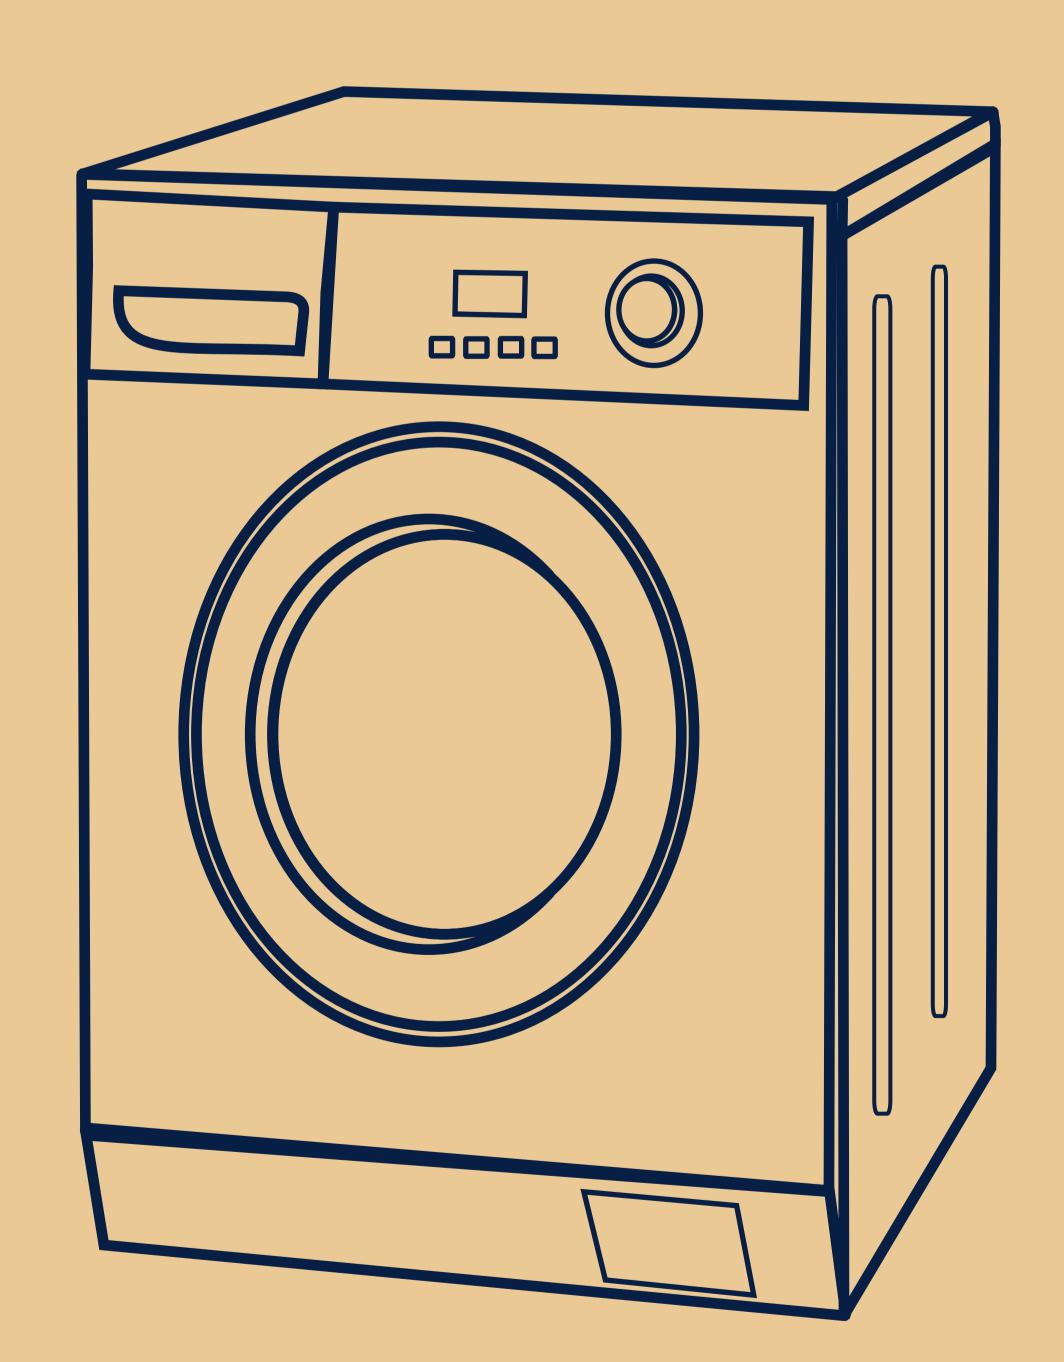

Thinking of you

RIFLECTROLLIX®

SERVICE

1800 419 40 40

Landline/Mobile-Toll Free

39 40 40 40

Prefix the STD code of the state capital

In case of consumer complaints, if any, please contact
PE ELECTRONICS LTD.
C/O, M/s Tekcare India Private Limited,
15 km. stone, Aurangabad-Paithan road,
Chitegaon Village, Taluka -Paithan,
Aurangabad - 431 105,
Phone No. (02431) 329271, 329783
E-mail: customercare@vgmail.in
website: www.servicedelight.com
Get registered by sending SMS - 'SVC' to 53030

TECHNICAL SPECIFICATIONS

Product	Front Loading Washing Machine					
Net Quantity (Nos)	Item	W/Mc	Inlet Hose	Manual	Ratmesh	
Net Quantity (NOS)	Qty	01	01	01	01	
Voltage / Watts	AC 230V, 50Hz / Wash : 2150W					
Capacity (kg)	6.0 Kg					
Packing Dimension (W x D x H) mm	680 x 590 x 875					
Product Dimension (W x D x H) mm	595 x 523 x 850					
Weight (kg)	Net :	65.0 / G	ross : 70.0			
MRP Rs. (Inclusive of all taxes)	Rs. 2	1990/-				
Month & Year of Mfg.	Refer	barcode	sticker for de	tail		
Imported VIDEOCON INDUSTRIES LIMITED 14th km stone, Aurangabad - Paithan road, Village Chitegaon, Dist. Aurangabad - 431 105 Maharashtra, India	Marketed By PE ELECTRONICS LTD. Registered office: Auto car Compound, Adalat Road, Dist. Aurangabad, Maharashtra - 431005					

Visit us at: www.electrolux.co.in

WASHING MACHINE

WASHING MACHINE

ELECTROLUX IS A REGISTERED TRADEMARK OF AB ELECTROLUX (PUBL.) AND IS USED UNDER LICENSE.

WASHING MACHINE

WASHING MACHINE

ELECTROLUX IS A REGISTERED TRADEMARK OF AB ELECTROLUX (PUBL.) AND IS USED UNDER LICENSE.


ELECTROLUX IS A REGISTERED TRADEMARK OF AB ELECTROLUX (PUBL.) AND IS USED UNDER LICENSE.









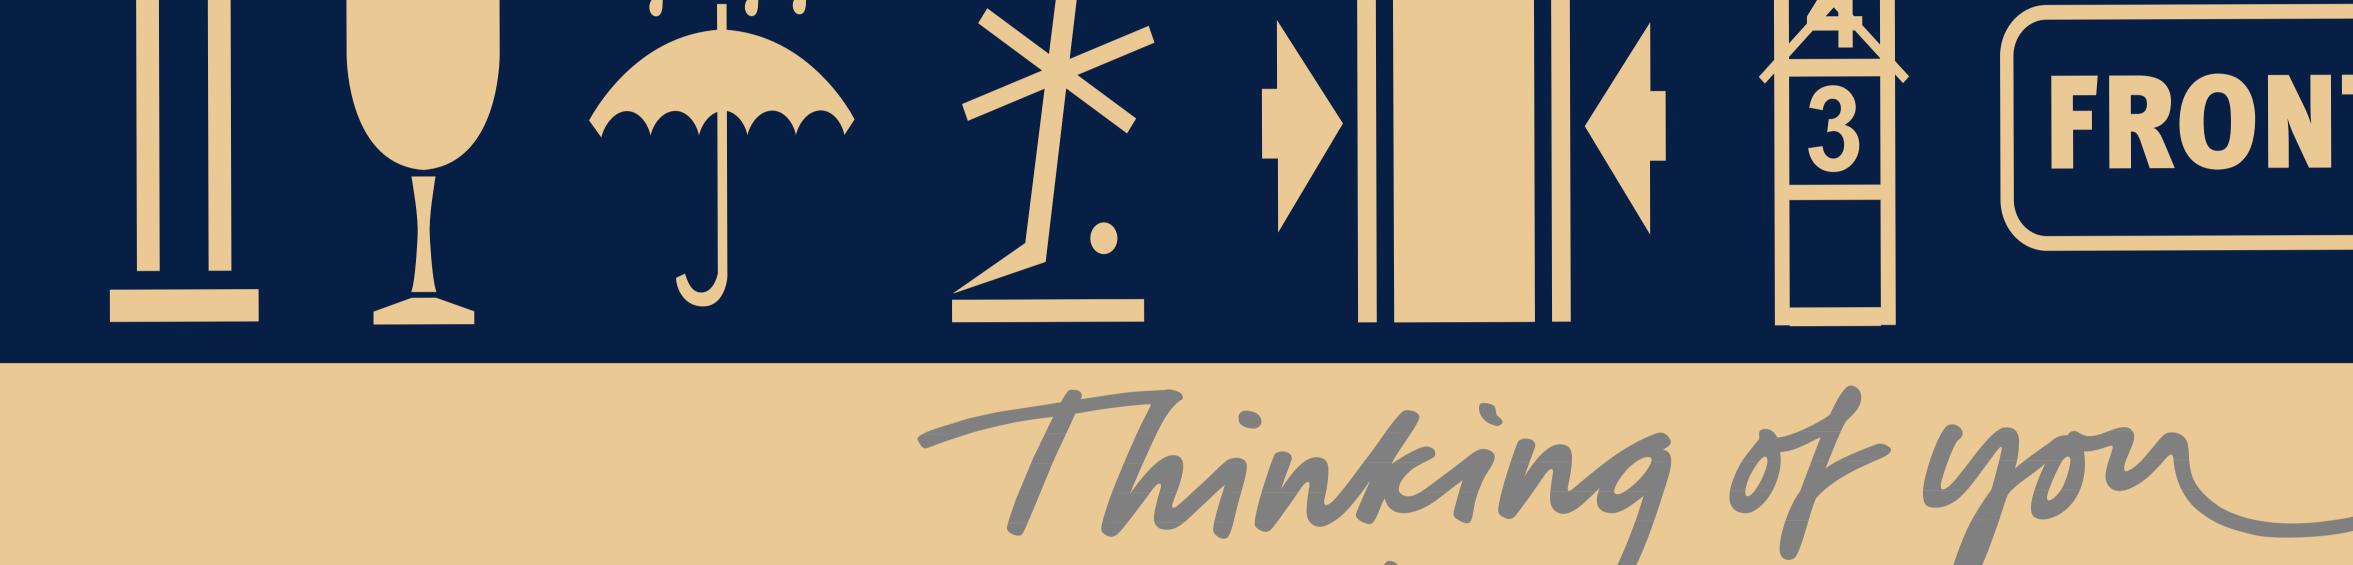

Electrolux®

FRONT LOAD
WASHING MACHINE





3 Electrolux®

SERVICE

© 1800 419 40 40

Landline/Mobile-Toll Free

Landline/Mobile-Toll Free

39 40 40

Prefix the STD code of the state capital

Customer First

In case of consumer complaints, if any, please contact:

PE ELECTRONICS LTD.

C/O, M/s Tekcare India Private Limited,
15 km. stone, Aurangabad-Paithan road,
Chitegaon Village, Taluka -Paithan,
Aurangabad - 431 105

hone No. (02431) 329271, 329783
-mail: customercare@vgmail.in
ebsite: www.servicedelight.com
et registered by sending SMS - 'SVC' to

TECHNICAL SPECIFICATIONS


Product	Front Loading Washing Machine							
Net Quantity (Nos)	Item	W/Mc	Inlet Hose	Manual	Ratmesh			
110t Qualitity (1103)	Qty	Qty 01 01 01						
Voltage / Watts	AC 23	30V, 50H	Hz / Wash : 22	200W				
Capacity (kg)	7.0 Kg							
Packing Dimension (W x D x H) mm	680 x 660 x 875							
Product Dimension (W x D x H) mm	595 x							
Weight (kg)	Net : 75.0 / Gross : 80.0							
MRP Rs. (Inclusive of all taxes)								
Month & Year of Mfg.	Refer barcode sticker for detail							
Imported By VIDEOCON INDUSTRIES LIMITED 14th km stone, Aurangabad - Paithan road, Village Chitegaon, Dist. Aurangabad - 431 105 Maharashtra, India	Marketed By PE ELECTRONICS LTD. Registered office: Auto car Compound, Adalat Road, Dist. Aurangabad, Maharashtra - 431005							

Visit us at: www.electrolux.co.in



Electrolux[®]

FRONT LOAD
WASHING MACHINE

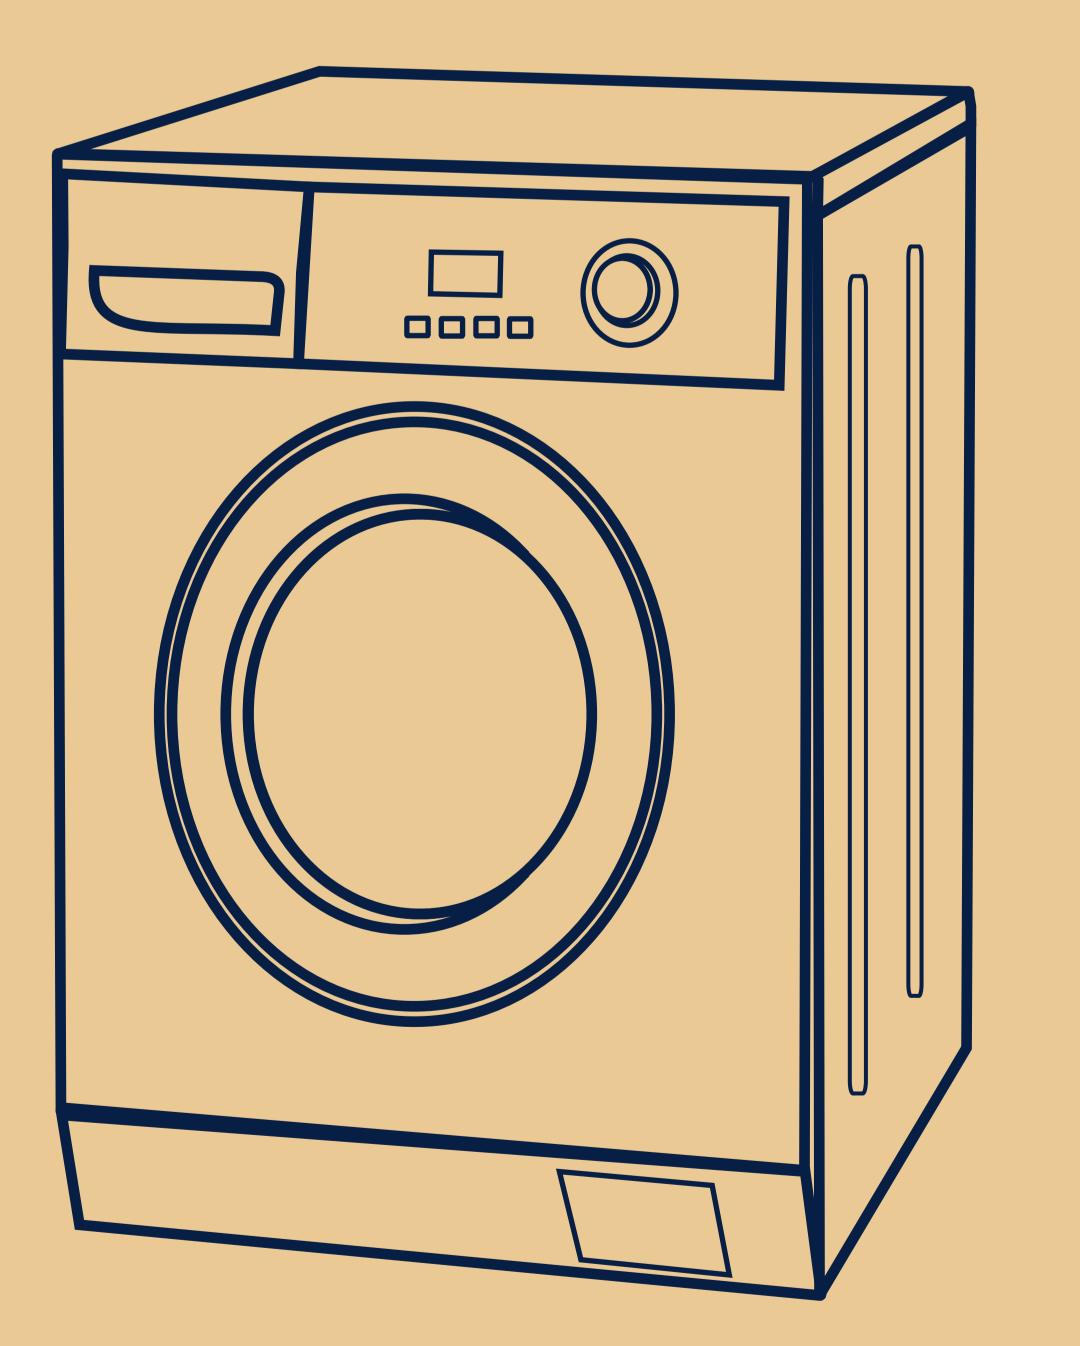



Electrolux®

SERVICE

© 1800 419 40 40
Landline/Mobile-Toll Free

© 39 40 40 40

Prefix the STD code of the state capital

Customer First

n case of consumer complaints, if any, please contact:

In case of consumer complaints, if any, please contact
PE ELECTRONICS LTD.
C/O, M/s Tekcare India Private Limited,
15 km. stone, Aurangabad-Paithan road,
Chitegaon Village, Taluka -Paithan,
Aurangabad - 431 105,
Phone No. (02431) 329271, 329783
E-mail: customercare@vgmail.in
website: www.servicedelight.com
Get registered by sending SMS - 'SVC' to 53030

TECHNICAL SPECIFICATIONS

Product	Front	Loading	g Washing Ma	chine			
Net Quantity (Nos)	Item	W/Mc	Inlet Hose	Manual	Ratmesh		
iver Quartity (1405)	Qty	01	01	01	01		
Voltage / Watts	AC 23	30V, 50H	lz / Wash : 22	200W			
Capacity (kg)	7.0 K	9					
Packing Dimension (W x D x H) mm	680 x 660 x 875						
Product Dimension (W x D x H) mm	595 x 565 x 850						
Weight (kg)	Net : 75.0 / Gross : 80.0						
MRP Rs. (Inclusive of all taxes)							
Month & Year of Mfg.	Refer barcode sticker for detail						
Imported By VIDEOCON INDUSTRIES LIMITED 14th km stone, Aurangabad - Paithan road, Village Chitegaon, Dist. Aurangabad - 431 105 Maharashtra, India	PE ELI Registe Adalat		CS LTD. : Auto car Comp st. Aurangabad,	oound,			

Visit us at: www.electrolux.co.in

WASHING MACHINE

WASHING MACHINE

WASHING MACHINE

WASHING MACHINE

ELECTROLUX IS A REGISTERED TRADEMARK OF AB ELECTROLUX (PUBL.) AND IS USED UNDER LICENSE.